



Original	Replacement	Original	Replacement
Power	Power	EPG	Guide / EPG / -/--
Mute	Mute / Dimmer	OPT	Setup / OPT /
TV	TV/Radio /	OK	OK
1	1	Up	Up
2	2	Down	Down
3	3	Left	Left
4	4	Right	Right
5	5	Vol+	Vol+
6	6	Vol-	Vol-
7	7	CH/Page+	CH+ / Page+
8	8	CH/Page-	CH- / Page-
9	9	Red	Red / Netflix / Search
0	0	Green	Green / APP / Repeat
Recall	Back / Return	Yellow	Yellow / YouTube / Repeat
Exit	Exit / Cancel / Clear	Blue	Blue / Prime Video / Random
List	Smart / List	Text	Text / Goto
APP	Shift + Green / APP / Repeat	Sub	Subtitle / EQ



