
























 









Original	Replacement
 Aper / Chiuso	 Eject / Surround
 Video / Y	 AV / Input / RDS
 Power	 Power
 OSD	 Display / Media
 PBC	 D.Menu / Top
 Titolo	 Sound / Title
 Menu	 Menu / Home
 Ricerca	 Red / Netflix / Search
 1	 1
 2	 2
 3	 3
 Repetizione	 Green / APP / Repeat
 4	 4
 5	 5
 6	 6
 A-B RPT	 Yellow / YouTube / Repeat
 7	 7

Original	Replacement
 8	 8
 9	 9
 Prog	 TV/Radio /
 Intro	 Smart / List
 0	 0
 10+	 Guide / EPG / -/-
 Pausa	 Pause / Step / Freeze
 Info / Play	 Play / Slow
 Info / Play	 Info / Angle
 Up	 Up
 Left	 Left
 Setup	 Setup / OPT /
 Right	 Right
 Ritorno	 Back / Return
 Down	 Down
 Stop	 Stop / Hold
 <I Ralent	 CH- / Page-





Original	Replacement
Ralent I>	CH+ / Page+
<< F.REV	<< / Tune-
>> F.FWD	>> / Tune+
Step	Shift + Pause / Step /
Zoom	Zoom / Size
I<< Prec	I<< / Preset-
>>I Succ	>>I / Preset+
Sottotitoli	Subtitle / EQ
NTSC/PAL	Picture / Format
Volume-	Vol-
Volume+	Vol+
ANALADONE	Sleep / Timer
TRACK	Text / Goto
Audio	Audio / Lang I/II
Muto	Mute / Dimmer

Original	Replacement

