




























Original	Replacement		
	Power		Power
	SD/USB- PVR		Smart / List
	Time		Sleep / Timer
	Mute		Mute / Dimmer
	Vol+		Vol+
	Source		AV / Input / RDS
	Ch+		CH+ / Page+
	Vol-		Vol-
	Mode		Picture / Format
	Ch-		CH- / Page-
	Tv/Radio		TV/Radio /
	Eject		Eject / Surround
	Audio		Audio / Lang I/II
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	L/R		Display / Media
	Stop		Stop / Hold

Original	Replacement		
	Subtitle / PC Auto		Subtitle / EQ
	Menu		Menu / Home
	Up		Up
	Exit		Exit / Cancel / Clear
	<<		<< / Tune-
	Left		Left
	Ok		OK
	Right		Right
	Fav		Fav / Marker / PC
	>>		>> / Preset+
	Down		Down
	>>		>> / Tune+
	Epg		Guide / EPG / -/-
	I<<		I<< / Preset-
	TTX/MIX		Text / Goto
	Info/Display		Info / Angle
	Red/Dvd Menu		Red / Netflix / Search





Original	Replacement
Red/Dvd Menu	D.Menu / Top
Green/Lang	Green / APP / Repeat
Green/Lang	+ Shift + Audio / Lang I/II
Yellow/Repeat	Yellow / YouTube / Repeat
Yellow/Repeat	+ Shift + Green / APP / Repeat
Blue/Dvd Setup	Blue / Prime Video / Random
Blue/Dvd Setup	Setup / OPT /
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
0	0
0	Return
0	Back / Return
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
0	0
0	Return
0	Back / Return
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
0	0
0	Return
0	Back / Return
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
0	0
0	Return
0	Back / Return
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
0	0
0	Return
0	Back / Return

Original	Replacement
0	0
0	Back / Return
1	
2	
3	
4	
5	
6	
7	
8	
9	
0	
0	
0	
0	
0	
0	
0	
0	
0	
0	
0	
0	
0	
0	
0	
0	
0	
0	
0	
0	
0	
0	
0	
0	

