










 
 






Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 PIP	 Info / Angle
 4	 4
 5	 5
 6	 6
 [ <> ]	 Picture / Format
 >	 >>  / Preset+
 7	 7
 8	 8
 9	 9
 ?	 Smart / List
  <	  << / Preset-
 0	 0
 Mute	 Mute / Dimmer

Original	Replacement
 i/OSD	 Display / Media
 Z/Disc Menu	 Menu / Home
 Up	 Up
 P+	 CH+ / Page+
 Left	 Left
 Vol-	 Vol-
 OK	 OK
 Right	 Right
 Vol+	 Vol+
 TXT	 Text / Goto
 <<	 << / Tune-
 Down	 Down
 P-	 CH- / Page-
 TV-G	 Guide / EPG / -/-
 >>	 >> / Tune+
 Red/Image/I>	 Red / Netflix / Search
 Green/Timer	 Green / APP / Repeat





Original	Replacement	Original	Replacement
	Play / Slow		
	Yellow / YouTube / Repeat		
	Pause / Step / Freeze		
	Blue / Prime Video / Random		
	Stop / Hold		
	Sound / Title		





 




Original	Replacement
Power	Power
1	1
2	2
3	3
Audio	Audio / Lang I/II
4	4
5	5
6	6
[ <> ]	Zoom / Size
>	>>  / Preset+
7	7
8	8
9	9
?	Smart / List
<	<< / Preset-
0	0
i/OSD	Display / Media

Original	Replacement
Disc Menu	D.Menu / Top
Disc Menu	Menu / Home
Up	Up
P+	CH+ / Page+
Left	Left
Vol-	Vol-
OK	OK
Right	Right
Vol+	Vol+
TXT	Text / Goto
<<	<< / Tune-
Down	Down
P-	CH- / Page-
TV-G	Guide / EPG / -/-
>>	>> / Tune+
Red/Picture	Picture / Format
Red/Picture	Red / Netflix / Search






Original		Replacement		Original		Replacement	
	Green / Timer		Sleep / Timer				
	Play		Play / Slow				
	Green / Timer		Green / APP / Repeat				
	Yellow/Pause		Yellow / YouTube / Repeat				
	Pause		Pause / Step / Freeze				
	Blue/Sound		Sound / Title				
	Stop		Stop / Hold				
	Blue/Sound		Blue / Prime Video / Random				





Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 Audio	 Audio / Lang I/II
 4	 4
 5	 5
 6	 6
 [ <> ]	 Zoom / Size
 >	 >>  / Preset+
 7	 7
 8	 8
 9	 9
 ?	 Smart / List
  <	  << / Preset-
 0	 0
 Mute	 Mute / Dimmer

Original	Replacement
 i/OSD	 Display / Media
 Z/Disc Menu	 Menu / Home
 Up	 Up
 P+	 CH+ / Page+
 Left	 Left
 Vol-	 Vol-
 OK	 OK
 Right	 Right
 Vol+	 Vol+
 TXT	 Text / Goto
 <<	 << / Tune-
 Down	 Down
 P-	 CH- / Page-
 TV-G	 Guide / EPG / -/-
 >>	 >> / Tune+
 Red/Image/I>	 Red / Netflix / Search
 Red/Image/I>	 Shift + Play / Slow





Original	Replacement	Original	Replacement
	Green / APP / Repeat		
	Play / Slow		
	Sleep / Timer		
	Pause / Step / Freeze		
	Yellow / YouTube / Repeat		
	Blue / Prime Video / Random		
	Stop / Hold		
	Sound / Title		

Original	Replacement





 









 



Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 PIP/Audio	 Audio / Lang I/II
 4	 4
 5	 5
 6	 6
 [ <> ]	 Zoom / Size
 >	 >>  / Preset+
 7	 7
 8	 8
 9	 9
 ?	 Smart / List
  <	  << / Preset-
 0	 0
 i/OSD	 Display / Media

Original	Replacement
 Z/Disc Menu	 Menu / Home
 P+	 CH+ / Page+
 Up	 Up
 Left	 Left
 Vol-	 Vol-
 OK	 OK
 Right	 Right
 Vol+	 Vol+
 TXT	 Text / Goto
 <<	 << / Tune-
 P-	 CH- / Page-
 Down	 Down
 TV-G	 Guide / EPG / -/-
 >>	 >> / Tune+
 Red/Image/I>	 Picture / Format
 Red/Image/I>	 Red / Netflix / Search
 Green/Timer	 Green / APP / Repeat





Original	Replacement	Original	Replacement
	 Play / Slow		
	 Sleep / Timer		
	 Yellow / YouTube / Repeat		
	 Pause / Step / Freeze		
	 Blue / Prime Video / Random		
	 Stop / Hold		
	 Sound / Title		

