 



 



 















 



 





 

 



 



 

 

 





 



 

 











| Original | Replacement | Original | Replacement |
|--|---|---|---|
|  Power |  Power |  Enter |  Shift + OK |
|  Mute |  Mute / Dimmer |  Tv |  TV/Radio / |
|  Right/Vol+ |  Right |  Scart |  >> / Tune+ |
|  Left/Vol- |  Left |  AV |  AV / Input / RDS |
|  1 |  1 |  PC |  Fav / Marker / PC |
|  2 |  2 |  Sleep |  Sleep / Timer |
|  3 |  3 |  Freeze |  Pause / Step / Freeze |
|  4 |  4 |  Wide |  Picture / Format |
|  5 |  5 |  Display |  Display / Media |
|  6 |  6 |  Menu |  Menu / Home |
|  7 |  7 |  e |  Info / Angle |
|  8 |  8 |  MPX |  Exit / Cancel / Clear |
|  9 |  9 |  PIP/PBP |  D.Menu / Top |
|  0 |  0 |  Up CH |  Up |
|  CH+ |  CH+ / Page+ |  Down CH |  Down |
|  CH- |  CH- / Page- |  Vol- |  Vol- |
|  Recall |  Back / Return |  Vol+ |  Vol+ |





| Original | | Replacement | | Original | | Replacement | |
|----------|-----------|-------------|-----------------------------|----------|--|-------------|--|
| | OK | | OK | | | | |
| | Swap | | Play / Slow | | | | |
| | Active | + | Shift + TV/Radio / Program | | | | |
| | Position | | Sound / Title | | | | |
| | Size/Mode | | Setup / OPT / | | | | |
| | Index | + | Shift + Info / Angle | | | | |
| | Subtitle | | Subtitle / EQ | | | | |
| | Reveal | | << / Tune- | | | | |
| | Teletext | | Text / Goto | | | | |
| | Size | | Zoom / Size | | | | |
| | Mix | + | Shift + Text / | | | | |
| | Subpage | + | Shift + Subtitle / EQ | | | | |
| | Hold | | Stop / Hold | | | | |
| | Red | | Red / Netflix / Search | | | | |
| | Green | | Green / APP / Repeat | | | | |
| | Yellow | | Yellow / YouTube / Repeat | | | | |
| | Blue | | Blue / Prime Video / Random | | | | |

