



Original		Replacement		Original		Replacement	
	Power		Power		Ch+		CH+ / Page+
	Dtv/Vcr		Display / Media		Green		Green / APP / Repeat
	1		1		>>		>> / Tune+
	2		2		Left		Left
	3		3		Vol-		Vol-
	4		4		Ok		OK
	5		5		Right		Right
	6		6		Vol+		Vol+
	7		7		Yellow		Yellow / YouTube / Repeat
	8		8		Down		Down
	9		9		Ch-		CH- / Page-
	Menu		Menu / Home		Blue		Blue / Prime Video / Random
	0		0		Mute		Mute / Dimmer
	Exit		Exit / Cancel / Clear		Pause		Pause / Step / Freeze
	Red		Red / Netflix / Search		Favorite		Fav / Marker / PC
	<<		<< / Tune-		Recall		Back / Return
	Up		Up		Lang		Shift + Audio / Lang I/II





Original		Replacement		Original		Replacement	
	Info		Info / Angle				
	Epg		Guide / EPG / -/--				
	Tv/Radio		TV/Radio /				
	Audio		Audio / Lang I/II				
	TTX		Text / Goto				
	Subtitle		Subtitle / EQ				

