











 


 
 

 

 
 
 
 









 
 


 
 
 



 
 
 
 

 
 


 
 
 
 
 

 
 












Original		Replacement		Original		Replacement	
	Power		Power		<< REW		I<<
	1		1		>> F FWD		>>
	2		2		>> F FWD		>>I
	3		3		Pause/Still		Pause
	4		4		Stop		Stop
	5		5		Up /Channel + / Tracking +		Up
	6		6		Down / Channel - / Tracking -		Down
	7		7		Left		Left
	8		8		Right		Right
	9		9		Clear		Exit
	0		0		OK / CLK / CNT		Ok
	TV/VCR		TV/R		i / Menu		Menu
	AD-Skip		Subt		Show View		Smart
	REC / QTR		Rec		Speed		Media
	Eject		Eject		AV		AV
	Play		Play		Child Lock		D. Menu
	<< REW		<<		VISS		Info





Original	Replacement	Original	Replacement
A-TR	A-TR	DISC NAV LIST	List
ZERO	Zero / Back	RETURN BACK	Back
OTPB	OTPB	PROG SLEEP	Sleep

