



 

 

 

 



 

 

 

 











 












































Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	DTV / ATV		D.Menu / Top
	0		0
	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer
	Vol +		Vol+
	MTS		Audio / Lang I/II
	CH +		CH+ / Page+
	Vol -		Vol-
	REC List		Smart / List
	CH -		CH- / Page-
	FAV List		Fav / Marker / PC
	REC		Rec / Rec Mode
	Freeze		Pause / Step / Freeze
	Menu		Menu / Home
	Up		Up
	Source		AV / Input / RDS
	Left		Left
	Enter		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down





Original	Replacement	Original	Replacement
 Display	 Display / Media	 Hold	 +  Shift + Stop /
 Red	 Red / Netflix / Search	 Text	 Text / Goto
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 << / Guide	 << / Tune-		
 << / Guide	 Guide / EPG / -/--		
 Play/Pause / Timeshift	 Play / Slow		
 >> / Aspect	 >> / Tune+		
 << / Cancel	 << / Preset-		
 >> / Subpage	 >> / Preset+		
 Stop / Index	 Info / Angle		
 Stop / Index	 Stop / Hold		
 TV / Radio	 TV/Radio /		
 Subtitle	 Subtitle / EQ		
 Reveal	 Setup / OPT /		
 Size	 Zoom / Size		

Original	Replacement
 Hold	 +  Shift + Stop /
 Text	 Text / Goto

