



Original		Replacement		Original		Replacement	
	Standby		Power		Subtitle		Subtitle / EQ
	Open/Close		Eject / Surround		Setup		Setup / OPT /
	1		1		Up		Up
	2		2		Zoom		Zoom / Size
	3		3		Left		Left
	OSD		Display / Media		OK		OK
	4		4		Right		Right
	5		5		Title		Sound / Title
	6		6		Down		Down
	Audio		Audio / Lang I/II		Menu		Menu / Home
	7		7		L/R		CH+ / Page+
	8		8		Play		Play / Slow
	9		9		Pause		Pause / Step / Freeze
	Angle		Info / Angle		Vol+		Vol+
	10/0		0		Stop		Stop / Hold
	10+		Guide / EPG / -/-		Mute		Mute / Dimmer
	Goto		Text / Goto		N/P		CH- / Page-





Original	Replacement	Original	Replacement
	+		Shift + Pause / Step /
	+		Shift + Play /
			Vol-
			Green / APP / Repeat
			Yellow / YouTube / Repeat
			TV/Radio /
			Back / Return
			<< / Tune-
			>> / Tune+
			Exit / Cancel / Clear
			AV / Input / RDS
			I<< / Preset-
			>>I / Preset+
			Blue / Prime Video / Random
			Smart / List

Original	Replacement	Original	Replacement

