



Original	Replacement
Open/Close	Eject / Surround
OSD	Display / Media
Standby/On	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
+10	Guide / EPG / -/-
0/10	0
Goto	Text / Goto
Setup	Setup / OPT /
Up	Up

Original	Replacement
Title	Sound / Title
Left	Left
Enter	OK
Right	Right
Zoom	Zoom / Size
Down	Down
Menu	Menu / Home
<<	<< / Tune-
>>	>> / Tune+
I<<	I<< / Preset-
>>I	>>I / Preset+
Stop	Stop / Hold
Play/Pause	Play / Slow
II>/Step	Pause / Step / Freeze
Ran	Blue / Prime Video / Random
I>/Slow	Picture / Format
Vol-	Vol-





Original	Replacement	Original	Replacement
 Vol+	 Vol+		
 Subtitle	 Subtitle / EQ		
 Audio	 Audio / Lang I/II		
 Angle	 Info / Angle		
 Video	 Shift + 4		
 PBC	 D.Menu / Top		
 Prog	 TV/Radio /		
 RL	 CH+ / Page+		
 NP	 CH- / Page-		
 Repeat	 Green / APP / Repeat		
 A-B	 Yellow / YouTube / Repeat		
 Return	 Back / Return		
 Mute	 Mute / Dimmer		

