 





 
 
 


 




 



 

 
 

 

 
 

 

 



 
 


 






 
 


 


 



 
 


 



 
 




Original	Replacement	Original	Replacement
 Power	 Power	 Blue/[]	 Blue
 Vol+	 Vol +	 Info	 Info
 Vol-	 Vol -	 Text	 Text
 PR+	 Ch +	 1	 1
 PR-	 Ch -	 2	 2
 Mute	 Mute	 3	 3
 Menu	 Menu	 4	 4
 Exit	 Exit	 5	 5
 Back	 Back	 6	 6
 OK	 Ok	 7	 7
 Up	 Up	 8	 8
 Down	 Down	 9	 9
 Right/Zoom+	 Right	 0/-/--	 0
 Left/Zoom-	 Left	 AV	 AV
 Red/[o]	 Red	 SP/LP	 Media
 Green/Timer/List	 Green	 Play	 Play
 Yellow	 Yellow	 >>	 >>





Original		Replacement		Original		Replacement	
	<<		<<				
	Stop		Stop				
	Pause		Pause				
	Rec		Rec				
	Mark		3D				
	0000		GUIDE				





Original	Replacement	Original	Replacement
	Power		Power
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	PR+		Ch +
	PR-		Ch -
	Exit		Exit
	Menu		Menu
	Back		Back
	Up		Up
	Down		Down
	Right/Zoom+		Right
	Left/Zoom-		Left
	OK		Ok
	Red/[o]		Red
	Green/Timer/List		Green
	Yellow		Yellow
	Blue/[]		Blue
	Info		Info
	Text		Text
	Play		Play
	Stop		Stop
	Rec		Rec
	Pause		Pause
	>>		>>
	<<		<<
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8





Original		Replacement		Original		Replacement	
	9		9				
	AV		AV				
	SP/LP		Media				


 
 
 


 

 
 
 




Original	Replacement	Original	Replacement
Power	Power	Blue/[]	Blue
Vol+	Vol +	Info	Info
Vol-	Vol -	Text	Text
Mute	Mute	1	1
PR+	Ch +	2	2
PR-	Ch -	3	3
Menu	Menu	4	4
Exit	Exit	5	5
Back	Back	6	6
Up	Up	7	7
Down	Down	8	8
Right/Zoom+	Right	9	9
Left/Zoom-	Left	0/-/--	0
OK	Ok	AV	AV
Red/[o]	Red	SP/LP	Media
Green/Timer/List	Green	Play	Play
Yellow	Yellow	Stop	Stop





Original	Replacement	Original	Replacement
 FWD	 >>		
 REV	 <<		
 REC	 REC MODE		
 PAUSE			
 MARK	 ECO 3D		
 0000	 -/-- GUIDE		

