





 







 

 

 

 

 

 

 















Original	Replacement
 Yellow	 Yellow / YouTube / Repeat
 Info	 Info / Angle
 Power	 Power
 Green/List	 Green / APP / Repeat
 Blue/[]	 Blue / Prime Video / Random
 Red	 Red / Netflix / Search
 Up	 Up
 Text	 Setup / OPT /
 Left/Zoom-	 Left
 OK	 OK
 Right/Zoom+	 Right
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Vol+	 Vol+
 PR+	 CH+ / Page+
 Vol-	 Vol-

Original	Replacement
 PR-	 CH- / Page-
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 AV	 AV / Input / RDS
 0/-/0	 0
 <<	 >> / Tune+
 Play	 Play / Slow
 >>	 I<< / Preset-
 Rec	 Rec / Rec Mode





Original	Replacement	Original	Replacement
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze





Original	Replacement
Yellow	Yellow / YouTube / Repeat
Info	Info / Angle
Power	Power
Green/List	Green / APP / Repeat
Blue/[]	Blue / Prime Video / Random
Red	Red / Netflix / Search
Up	Up
Text	Setup / OPT /
Left/Zoom-	Left
OK	OK
Right/Zoom+	Right
Down	Down
Exit	Exit / Cancel / Clear
Menu	Menu / Home
Vol+	Vol+
PR+	CH+ / Page+
Vol-	Vol-

Original	Replacement
PR-	CH- / Page-
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
AV	AV / Input / RDS
<<	>> / Tune+
Play	Play / Slow
>>	I<< / Preset-
Rec	Rec / Rec Mode
Stop	Stop / Hold














 







 

 

 

 

 

 

 









Original	Replacement	Original	Replacement
	Pause / Step / Freeze		









Original	Replacement
 Yellow	 Yellow / YouTube / Repeat
 Info	 Info / Angle
 Power	 Power
 Green/List	 Green / APP / Repeat
 Blue/[]	 Blue / Prime Video / Random
 Red	 Red / Netflix / Search
 Up	 Up
 Text	 Setup / OPT /
 Left/Zoom-	 Left
 OK	 OK
 Right/Zoom+	 Right
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Vol+	 Vol+
 PR+	 CH+ / Page+
 Vol-	 Vol-

Original	Replacement
 PR-	 CH- / Page-
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 AV	 AV / Input / RDS
 0/-/--	 0
 <<	 >> / Tune+
 Play	 Play / Slow
 >>	 I<< / Preset-
 Rec	 Rec / Rec Mode





Original	Replacement
	 Stop / Hold
	 Pause / Step / Freeze

Original	Replacement

