






Original	Replacement
 Power	 Power
 ⊖	 PROG SLEEP Sleep
 Exit	 CLEAR EXIT Exit
 I-II	 SOUND DUAL Dual
 I.S.	 HOME SMART Smart
 [i+]	 DISPLAY INFO Info
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Smart Audio	 SHIFT + SOUND DUAL Shift + Dual

Original	Replacement
 Smart Picture	 PICTURE FORMAT Format
 Menu	 TOP MENU MENU Menu
 Text / OK	 OK Ok
 Text / OK	 REPEAT TEXT Text
 Up	 Up
 Left	 Left
 Right	 Right
 Down	 Down
 Vol +	 + VOL Vol +
 Vol -	 VOL - Vol -
 Mute	 MUTE Mute
 P +	 + CH Ch +
 P -	 CH - Ch -
 Red / Rec	 A Red
 Red / Rec	 REC MODE Rec
 Green / <<	 B Green
 Green / <<	 << <<





Original	Replacement	Original	Replacement
 Yellow / Stop	 Yellow		
 Yellow / Stop	 Stop		
 Blue / Play	 Blue		
 Blue / Play	 Play		
 [X]	 SHIFT +  CLEAR  EXIT Shift + Exit		
 [◆] / ⊕	 3D 3D		
 [□] / >>	 SHIFT +  Stop Shift + Stop		
 [□] / >>	 >> >>		
 [/≡]	 SHIFT +  REPEAT  TEXT Shift + Text		
 [?]	 SEARCH TV/R TV/R		
 [≡i]	 GUIDE Guide		

