



Original	Replacement
	Power
	D.Menu / Top
	Display / Media
	Eject / Surround
	Sound / Title
	1
	2
	3
	Menu / Home
	4
	5
	6
	Picture / Format
	7
	8
	9
	Setup / OPT /

Original	Replacement
	0
	Guide / EPG / -/-
	Exit / Cancel / Clear
	Zoom / Size
	Up
	Shift + Pause / Step /
	Left
	OK
	Right
	Shift + Play /
	Down
	Back / Return
	Pause / Step / Freeze
	Play / Slow
	Stop / Hold
	<< / Tune-
	>> / Tune+



