



 
 


 

 
 


 



 

 
 
 

 

 
 




 

 




 
 
 




 

 



 
 



 


 
 












Original		Replacement		Original		Replacement	
	Power		Power		CH+		Ch +
	1		1		CH-		Ch -
	2		2		OK		Ok
	3		3		Up		Up
	4		4		Down		Down
	5		5		Right		Right
	6		6		Left		Left
	7		7		Menu		Menu
	8		8		Exit		Exit
	9		9		EPG		Guide
	0		0		Info		Info
	FAV	 + 	Shift + Pre Ch		Mute		Mute
	Recall		Pre Ch		Picture	 + 	Shift + Format
	Tv/TXT		Text		Audio		Dual
	Input		AV		Subtitle		Subt
	Vol+		Vol +		ECO/TFT Off		Media
	Vol-		Vol -		Sound		Sleep





Original		Replacement		Original	Replacement
	Pause/TS		Pause		
	Play		Play		
	Record		Rec		
	Stop		Stop		
	Play/List		3D		
	CH/List		Format		
	Blue/Sleep		Blue		
	Yellow		Yellow		
	Green		Green		
	Red		Red		
	Goto/Cancel		Options		
	Rep/Reveal		List		
	<</Hold		<<		
	>>/Size		>>		
	I<</Subpage		I<<		
	>>I/Index		>>I		

