






 

 












 

 

 



 

 

 







 

 





 



 



 

 



 



 




Original	Replacement	Original	Replacement
 Power	 Power	 Open / Close	 Eject
 Mute	 Mute	 Play	 Play
 Screen	 +  Shift + Format	 Pause	 Pause
 Screen	 Smart	 Stop	 Stop
 Tv / AV	 AV	 Rec	 Rec
 1	 1	 Up	 Up
 2	 2	 Down	 Down
 3	 3	 Right	 Right
 4	 4	 Left	 Left
 5	 5	 CH+	 Ch +
 6	 6	 CH-	 Ch -
 7	 7	 Vol+	 Vol +
 8	 8	 Vol-	 Vol -
 9	 9	 OK	 Ok
 0	 0	 Tv-Menu	 Menu
 -/-	 +  Shift + Guide	 Exit	 Exit
 Return	 Back	 Info	 Info



