


 


 



Original		Replacement		Original		Replacement	
	Power		Power		Guide		Guide
	Mute		Mute		Exit		Exit
	1		1		Up		Up
	2		2		Left		Left
	3		3		OK		Ok
	4		4		Right		Right
	5		5		Down		Down
	6		6		Input		AV
	7		7		Menu		Menu
	8		8		Fav. CH		Pre Ch
	9		9		Vol. +		Vol +
	0		0		Vol.-		Vol -
	Jump		Back		CH. +		Ch +
	-/--		Shift + Guide		CH.-		Ch -
	S.Mode		Shift + Dual		Rec		Rec
	I-II		Dual		DTV / Radio		TV/R
	P.Mode		Format		Sleep		Sleep





Original	Replacement
 Subtitle	 Subt
 P.Size	 Eject
 Subpage	 Shift + Subt
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 [≡i]	 Smart
 [≡?]	 Media
 [≡↓]	 3D
 [≡□]	 Shift + Stop
 [≡] / [/≡]	 Text
 Stop	 Stop
 Play/Pause / Timeshift	 Play
 Play/Pause / Timeshift	 Pause
 Info	 Info
 I<<	 I<<

Original	Replacement
 >>	 >>
 <<	 <<
 >>	 >>

