









 



 
















 



 











 



 




 



 






 




Original		Replacement		Original		Replacement	
	Standby		Power		Stop		Stop / Hold
	1		1		Play/Pause		Play / Slow
	2		2		Play/Pause		Pause / Step / Freeze
	3		3		I>/Resume		Shift + Play /
	4		4		Surround		Eject / Surround
	5		5		Sound		Sound / Title
	6		6		Night		Shift + Sleep / Timer
	7		7		Mute		Mute / Dimmer
	8		8		Repeat		Green / APP / Repeat
	9		9		Repeat A-B		Yellow / YouTube / Repeat
	0		0		Sleep		Sleep / Timer
	Vol+		Vol+		DIM		Shift + Mute / Dimmer
	Vol-		Vol-		Subw +		Up
	Left		Left		Rear +		Shift + CH+ /
	Right		Right		Center +		CH+ / Page+
	I<<		I<< / Preset-		Tv Vol+		Shift + Vol+
	>>I		>>I / Preset+		Subw -		Down





Original		Replacement		Original		Replacement	
	Rear -		Shift + CH- /				
	Center -		CH- / Page-				
	Tv Vol-		Shift + Vol-				







 



 

 

 









 

 



 







Original		Replacement		Original		Replacement	
	Standby		Power		Stop		Stop / Hold
	1		1		Play/Pause		Play / Slow
	2		2		I>/Resume		Shift + Play /
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	Disc (DVD)		D.Menu / Top				
	0		0				
	Vol+		Vol+				
	System (DVD)		Menu / Home				
	Vol-		Vol-				
	I<<		I<< / Preset-				
	>>I		>>I / Preset+				























 



Original		Replacement		Original		Replacement	
	Standby		Power				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Up		Up				
	Left		Left				
	OK		OK				
	Right		Right				
	Down		Down				







Original		Replacement		Original		Replacement	
	Standby		Power				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				

