






 

 

 





 



 

 

 
 
 

 







 



 

 



 

 



 



 



 



 






Original	Replacement	Original	Replacement
 Power	 Power	 TXT/MIX	 Text
 Sleep	 Sleep	 Play	 Play
 Mute	 Mute	 Pause	 Pause
 Mode	 Media	 Stop	 Stop
 1	 1	 Rec	 Rec
 2	 2	 >>/Index	 >>
 3	 3	 <</Hold	 <<
 4	 4	 I<<	 I<<
 5	 5	 >>I	 >>I
 6	 6	 Cancel	 Exit
 7	 7	 Menu	 Menu
 8	 8	 DTV/Radio	 TV/R
 9	 9	 Vol+	 Vol +
 0	 0	 Vol-	 Vol -
 -/--	 Shift + Guide	 Up	 Up
 Back	 Back	 Down	 Down
 Nicam/A2	 Dual	 Right	 Right








 
 






 

 
 


 

 
Original	Replacement
	Left
	Ok
	Ch +
	Ch -
	Pre Ch
	Guide
	Info
	List
	Red
	Green
	Yellow
	Blue
	Format
	3D
	Subt
	AV
	Shift + Ch +

Original	Replacement
	Shift + Ch -





Original	Replacement	Original	Replacement
Power		Power	Power
Mute		Mute	Mute
[I]/Menu		Menu	Menu
Exit		Exit	Exit
Source		AV	AV
1		1	1
2		2	2
3		3	3
4		4	4
5		5	5
6		6	6
7		7	7
8		8	8
9		9	9
0		0	0
Subtitle		Subt	Subt
Text		Text	Text

Original	Replacement	Original	Replacement
Vol+		Vol +	Vol +
Vol-		Vol -	Vol -
CH+		Ch +	Ch +
CH-		Ch -	Ch -
Up		Up	Up
Down		Down	Down
Right		Right	Right
Left		Left	Left
OK		Ok	Ok
Recall		Back	Back
Info		Info	Info
EPG		Guide	Guide
Freeze		Options	Options
Red		Red	Red
Green		Green	Green
Yellow		Yellow	Yellow
Blue		Blue	Blue





Original	Replacement	Original	Replacement
Audio	Dual		
<</[≡+]	<<		
>> /[≡..]	>>		
[≡i]	Smart		
Play	Play		
Pause	Pause		
Stop	Stop		
REP/Rec	Rec		
<<[/≡o]	<<		
>>[/≡?]	>>		
FAV	Pre Ch		

