




 

 


 

 
 
 


 
 



 


 

 


 
 
 

 

 


Original	Replacement	Original	Replacement
 Power	 Power	 Up	 Up
 Mute	 Mute	 Left	 Left
 Recall	 Back	 OK	 Ok
 EPG	 Guide	 Right	 Right
 Info	 Info	 Down	 Down
 1	 1	 PAL / NTSC	 Format
 2	 2	 FAV	 Pre Ch
 3	 3	 TV / Radio	 TV/R
 4	 4	 SAT	 Smart
 5	 5	 TV / AV	 AV
 6	 6	 Play / Pause	 Play
 7	 7	 Play / Pause	 Pause
 8	 8	 Zoom	 Eject
 9	 9	 Red / Audio	 Red
 0	 0	 Red / Audio	 Dual
 Menu	 Menu	 Green / Position	 Green
 Exit	 Exit	 Yellow / Text	 Yellow

Original	Replacement	Original	Replacement
 MUTE	 MUTE	 SHIFT	 SHIFT
 TV	 TV	 DVD	 DVD
 SAT	 SAT	 AUX	 AUX
 PLAY MODE	 PLAY MODE	 REC MODE	 REC MODE
 Play	 Play	 Pause	 Pause
 Stop	 Stop	 Fast Forward	 Fast Forward
 Fast Reverse	 Fast Reverse	 Fast Forward	 Fast Forward
 Fast Forward	 Fast Forward	 Fast Reverse	 Fast Reverse
 DISC NAV	 DISC NAV	 SOUND	 SOUND
 LIST	 LIST	 AD	 AD
 PROG	 PROG	 SETTINGS	 SETTINGS
 SEARCH	 SEARCH	 OPT	 OPT
 PICTURE	 PICTURE	 ECO	 ECO
 SLEEP	 SLEEP	 3D	 3D
 TV/R	 TV/R	 FORMAT	 FORMAT
 E-MANUAL	 E-MANUAL	 TIMER	 TIMER
 D.MENU	 D.MENU	 AV	 AV
 REPEAT	 REPEAT	 ZOOM	 ZOOM
 TEXT	 TEXT	 UP	 UP
 TOP MENU	 TOP MENU	 INFO	 INFO
 MENU	 MENU	 OK	 OK
 EXIT	 EXIT	 RETURN BACK	 RETURN BACK
 CLEAR	 CLEAR	 HOME	 HOME
 VOL +	 VOL +	 SMART	 SMART
 VOL -	 VOL -	 APP	 APP
 CH +	 CH +	 MEDIA	 MEDIA
 CH -	 CH -	 1	 1
 1	 1	 2	 2
 2	 2	 3	 3
 3	 3	 4	 4
 4	 4	 5	 5
 5	 5	 6	 6
 6	 6	 7	 7
 7	 7	 8	 8
 8	 8	 9	 9
 9	 9	 0	 0
 0	 0	 FAV	 FAV
 GUIDE	 GUIDE	 PRE-CH	 PRE-CH
 A	 A	 SOUND DUAL	 SOUND DUAL
 B	 B	 Green	 Green
 C	 C	 Yellow	 Yellow
 D	 D		
			





Original	Replacement	Replacement
Power		Power
Mute		Mute
TV / AV		AV
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
0		0
Recall		Back
SAT		Smart
Menu		Menu
EPG		Guide

Original	Replacement	Replacement
Info		Info
Exit		Exit
Up		Up
Left		Left
OK		Ok
Right		Right
Down		Down
Vol+		Vol +
Vol-		Vol -
Page+		Ch +
Page-		Ch -
Red / Audio		Red
Red / Audio		Dual
Green / 		Green
Yellow / Text		Yellow
Yellow / Text		Text
Blue / Find		Blue



