








 




























| Original | Replacement |
|----------------------|--|
| Index / Text Subcode |  D.Menu / Top |
| TV Moni |  Smart / List |
| Zero Return |  Green / APP / Repeat |
| 00:00:00 |  Red / Netflix / Search |
| Pause / > < |  Pause / Step / Freeze |
| 0 / AV |  AV / Input / RDS |
| 0 / AV |  0 |
| Trk+ |  CH+ / Page+ |
| Trk- |  CH- / Page- |
| Left / << |  Left |
| Left / <<< |  << / Tune- |
| Right / >> |  >> / Tune+ |
| Right / >>> |  Right |
| Down / Stop |  Stop / Hold |
| Down / Stop |  Down |
| Enter / Text Hold |  +  Shift + Stop / |
| Cancel / Text Size |  Zoom / Size |

| Original | Replacement |
|--------------------|---|
| Cancel / Text Size |  Exit / Cancel / Clear |
| ATR / Text Reveal |  Display / Media |
| Enter / Text Hold |  OK |
| Up / Play |  Play / Slow |
| Timer Rec |  +  Shift + Sleep / Timer |
| Rec / OTR |  Rec / Rec Mode |
| Up / Play |  Up |
| Menu |  Menu / Home |
| Program |  TV/Radio / |
| Text / Mix |  Text / Goto |
| 8 |  8 |
| Timer |  Sleep / Timer |
| Eject |  Eject / Surround |
| 1 |  1 |
| 2 |  2 |
| 3 |  3 |
| 4 |  4 |



