






 






 





 


 

 
 

 









| Original  | Replacement   | Original  | Replacement   |
|---|---|---|---|
|  Power         |  Power             |  Vol+          |  Vol+                        |
|  TV/RAD        |  TV/Radio /        |  Mute          |  Mute / Dimmer               |
|  Input         |  AV / Input / RDS  |  PR+/Page Up   |  CH+ / Page+                 |
|  AV Mode       |  Picture / Format  |  Vol-          |  Vol-                        |
|  Energy Saving |  Eject / Surround  |  PR-/Page Down |  CH- / Page-                 |
|  1             |  1                 |  Up            |  Up                          |
|  2             |  2                 |  Left          |  Left                        |
|  3             |  3                 |  OK            |  OK                          |
|  4             |  4                 |  Right         |  Right                       |
|  5             |  5                 |  Menu          |  Menu / Home                 |
|  6            |  6                |  Down         |  Down                       |
|  7           |  7               |  Return      |  Back / Return             |
|  8           |  8               |  Red         |  Red / Netflix / Search    |
|  9           |  9               |  Green/Stop  |  Green / APP / Repeat      |
|  List        |  Smart / List    |  Green/Stop  |  Stop / Hold               |
|  0           |  0               |  Yellow/Play |  Yellow / YouTube / Repeat |
|  Q.View      |  Display / Media |  Yellow/Play |  Play / Slow               |





| Original   | Replacement   |
|--|---|
|  Blue/Pause   |  Blue / Prime Video / Random |
|  Blue/Pause   |  Pause / Step / Freeze       |
|  Text/[≡]     |  Text / Goto                 |
|  T.OPT/<<<    |  I<< / Preset-               |
|  T.OPT/<<<    |  Setup / OPT /               |
|  T.OPT/<<<    |  <<< / Tune-                 |
|  Subtitle/>>> |  >>> / Preset+               |
|  Subtitle/>>> |  Subtitle / EQ               |
|  Subtitle/>>> |  >>> / Tune+                 |
|  Simplink    |  Sleep / Timer              |
|  Q.Menu     |  D.Menu / Top              |
|  Info       |  Info / Angle              |
|  Guide      |  Guide / EPG / -/--        |
|  FAV/Mark   |  Fav / Marker / PC         |
|  |   |
|  |   |
|  |   |

| Original | Replacement |
|----------|-------------|
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |

