

 
 
 


 
 


 




 
 




 
 






 

 
 
 
 
 
 


 
 




 



 
 


 
 



 


 







 




Original	Replacement	Original	Replacement
 Power	 Power	 Exit	 Exit
 Mute	 Mute	 Up	 Up
 Rec List	 Smart	 Down	 Down
 CH/List	 Media	 Right	 Right
 Subtitle	 Subt	 Left	 Left
 Repeat	 +  Shift + Text	 Ok	 Ok
 Rec	 Rec	 1	 1
 Stop	 Stop	 2	 2
 I<<	 I<<	 3	 3
 >>I	 >>I	 4	 4
 Pause	 Pause	 5	 5
 Play	 Play	 6	 6
 <<	 <<	 7	 7
 >>	 >>	 8	 8
 Input	 AV	 9	 9
 Display	 Info	 0	 0
 Menu	 Menu	 Recall	 Back





Original		Replacement		Original		Replacement	
	FAV		Pre Ch		Size		Format
	Vol+		Vol +		Hold		TV/R
	Vol-		Vol -		Subpage		D. Menu
	Picture	 + 	Shift + Format		Index		List
	Epg		Guide				
	Sound		Dual				
	Sleep		Sleep				
	Ch+		Ch +				
	Ch-		Ch -				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Tv/Txt		Text				
	Cancel		Eject				
	Reveal		3D				
	Nicam/A2		Options				

