

 






 



 




 





Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	<</[Timer]		<< / Tune-
	>>/[≡?]		>> / Tune+
	I<</[≡⇓]		I<< / Preset-
	>>I/[≡...]		>>I / Preset+
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	[≡i]		Shift + Info / Angle
	Text		Text / Goto
	Subtitle		Subtitle / EQ
	Freeze		Shift + Pause / Step / Freeze
	Info		Info / Angle
	[II]		Shift + Audio / Lang I/II
	Source/Av		AV / Input / RDS
	Up		Up
	Left		Left
	Ok		OK
	Right		Right
	Down		Down
	Epg		Guide / EPG / -/-
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	Fav		Fav / Marker / PC
	Ch+		CH+ / Page+
	Vol-		Vol-
	Rec		Rec / Rec Mode
	Ch-		CH- / Page-
	1		1





Original	Replacement	Original	Replacement
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Audio		Audio / Lang I/II
	0		0
	Recall		Back / Return

