 


 

 


 
 

 
 
 

 

 
 
 

 






 



 


 


 





Original	Replacement	Original	Replacement
	Power		Mute
	1		Mute
	2		TV/R
	3		Back
	4		Menu
	5		Up
	6		Down
	7		Right
	8		Left
	9		Ok
	0		Dual
	AV		Text
	-/--		Info
	Ch +		Play / Pause
	Ch -		Pause
	Vol +		Stop
	Vol -		Rec
			Red





	Original	Replacement	Original	Replacement
	Green			
	Yellow			
	Blue	