 


 

 


 
 


 

 




 
 
 

 





 









Original	Replacement	Original	Replacement
 Power	 Power	 Rec List	 List
 Mute	 Mute	 CH +	 Ch +
 1	 1	 CH -	 Ch -
 2	 2	 Menu	 Menu
 3	 3	 Source	 AV
 4	 4	 Up	 Up
 5	 5	 Right	 Right
 6	 6	 Down	 Down
 7	 7	 Left	 Left
 8	 8	 Enter	 Ok
 9	 9	 Exit	 Exit
 0	 0	 Display	 Info
 DTV / ATV	 Shift + TV/R	 P.Mode	 Shift + Format
 Recall	 Back	 S.Mode	 Dual
 V +	 Vol +	 Sleep	 Sleep
 V -	 Vol -	 Fav / List	 Pre Ch
 Rec	 Rec	 MTS	 Shift + Dual



