



| Original | Replacement |
|--|---|
|  POWER |  Power |
|  INFO |  Info / Angle |
|  MUTE |  Mute / Dimmer |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  SOURCE |  AV / Input / RDS |
|  0 |  0 |
|  AUDIO |  Audio / Lang I/II |
|  FORMAT |  Picture / Format |
|  BACK |  Back / Return |

| Original | Replacement |
|---|--|
|  MENU |  Menu / Home |
|  EXIT |  Exit / Cancel / Clear |
|  UP |  Up |
|  LEFT |  Left |
|  ENTER |  OK |
|  RIGHT |  Right |
|  VOL+ |  Vol+ |
|  DOWN |  Down |
|  CH+ |  CH+ / Page+ |
|  VOL- |  Vol- |
|  CH- |  CH- / Page- |
|  LIST |  Smart / List |
|  SLEEP |  Sleep / Timer |
|  EPG |  Guide / EPG / -/- |
|  FAV |  Fav / Marker / PC |
|  << |  << / Tune- |
|  RED |  Red / Netflix / Search |





| | Original | Replacement | Original | Replacement |
|--|--|---|----------|-------------|
| |  >> |  >> / Tune+ | | |
| |  GREEN |  Green / APP / Repeat | | |
| |  I<< |  I<< / Preset- | | |
| |  YELLOW |  Yellow / YouTube / Repeat | | |
| |  BLUE |  Blue / Prime Video / Random | | |
| |  >>I |  >>I / Preset+ | | |
| |  PLAY |  Play / Slow | | |
| |  PAUSE |  Pause / Step / Freeze | | |
| |  TEXT |  Text / Goto | | |
| |  STOP |  Stop / Hold | | |
| |  SUBTITLE |  Subtitle / EQ | | |
| |  RADIO |  TV/Radio / | | |
| |  OPT |  Setup / OPT / | | |
| |  DMP |  Display / Media | | |
| |  INDEX |  D.Menu / Top | | |
| |  REC |  Rec / Rec Mode | | |

