



Original	Replacement	Original	Replacement
Power	Power	---/	Shift + Guide / EPG / ---/
Mute	Mute / Dimmer	Jump	Smart / List
Source	AV / Input / RDS	Menu	Menu / Home
P.Mode	Picture / Format	Info	Info / Angle
S.Mode	Sound / Title	Sleep	Sleep / Timer
I/II/Audio	Audio / Lang I/II	Exit	Exit / Cancel / Clear
P.Size	Zoom / Size	Up	Up
1	1	Left	Left
2	2	Enter	OK
3	3	Right	Right
4	4	Down	Down
5	5	Vol+	Vol+
6	6	Vol-	Vol-
7	7	P-	CH- / Page-
8	8	P+	CH+ / Page+
9	9	Red/D.Setup	Red / Netflix / Search
0	0	Red/D.Setup	Setup / OPT /





Original		Replacement		Original		Replacement	
	Green/Repeat		Green / APP / Repeat		>>		>> / Preset+
	Yellow/Zoom		Yellow / YouTube / Repeat		DVD Menu		D.Menu / Top
	Yellow/Zoom		Shift + Zoom /		Text		Text / Goto
	Blue/Goto		Blue / Prime Video / Random		Subtitle		Subtitle / EQ
	Blue/Goto		Shift + Text /		Guide		Guide / EPG / -/--
	[≡i]/FAV.CH		Fav / Marker / PC				
	[≡?]/Freeze		Shift + Pause / Step /				
	[≡♦]/USB/SD		Shift + 8				
	[≡+]/Tv/Radio		TV/Radio /				
	Rec		Rec / Rec Mode				
	Stop		Stop / Hold				
	Open/Close		Eject / Surround				
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				
	<<		<< / Tune-				
	>>		>> / Tune+				
	<<		<< / Preset-				

