

Original	Replacement	Original	Replacement
Power ON/Off	 Power	Woofer/Speed	 Right
CD Play	 Play / Slow	Volume+	 Vol+
CD Pause	 Pause / Step / Freeze	Funct./Direct	 Smart / List
Stop	 Stop / Hold	Vol Rs+/S.Mode	 CH+ / Page+
CD Rewind	 << / Tune-	Volume-	 Vol-
CD F.FWD	 >> / Tune+	Display	 Display / Media
Prev./Prog-	 I<< / Preset-	Vol Rs-/Effect	 CH- / Page-
Next/Prog+	 >>I / Preset+	Pr 1	 1
Tape 2 Pre./eq	 Subtitle / EQ	Pr 2	 2
Tape 1 Hall/Ats	 Eject / Surround	Pr 3	 3
Sleep	 Sleep / Timer	Pr 4	 4
Program	 TV/Radio /	Pr 5	 5
CD/Theater	 Setup / OPT /	Pr 6	 6
Input/Source	 AV / Input / RDS	Repeat	 Green / APP / Repeat
Mode	 Menu / Home	CD Random	 Blue / Prime Video / Random
Tape 1 Preset	 Up	Tape 1 Play	 Shift + Play /
Preset Pause	 OK	Tape 1 Stop	 Shift + Stop /

Hold



The image shows a black Mandis remote control with a variety of buttons. At the top, there is a power button (red circle with a power symbol), a DIMMER MUTE button (black with white text), and a SHIFT button (yellow circle with black text). Below these are four blue buttons labeled TV, DVD, SAT, and AUX. The TV button has a SLOW label below it. The DVD button has STEP - FREEZE below it. The SAT button has HOLD below it. The AUX button has REC MODE below it. The next row contains a play button, a pause button, a stop button, and a red emergency stop button. Below these are buttons for TUNE-, TUNE+, PRESET-, and PRESET+. The next row contains a left arrow button, a right arrow button, a double left arrow button, and a double right arrow button. Below these are buttons for TITLE, LANG /VI, EQ, and SURROUND. The next row contains SOUND, AUDIO, SUBTITLE, and a button with an upward arrow. Below these are buttons for FORMAT, SIZE, TIMER, and PROGRAM. The next row contains PICTURE, ZOOM, SLEEP, and TV/ RADIO. Below these are buttons for TOP MENU, OPT-TOOLS, GOTO, and RDS. The next row contains D.MENU, SETUP, TEXT, and AV INPUT. Below these are HOME and ANGLE buttons. The next row contains a MENU button, a central OK button with four directional arrows (up, down, left, right), and an INFO button. Below these are CLEAR and RETURN buttons. The next row contains EXIT and BACK buttons. Below these are CANCEL and LIST buttons. The next row contains a large + VOL button, a SMART button, a MEDIA button, a DISPLAY button, and a large + CH PAGE button. Below these are TV, DVD, and CD - STB buttons. The next row contains buttons for 1, 2, and 3. Below these are VIDEO, TAPE, and TUNER buttons. The next row contains buttons for 4, 5, and 6. Below these are AUX - HDD, USB, and BLUETOOTH buttons. The next row contains buttons for 7, 8, and 9. Below these are buttons for J--, HDMI - SAT, and PC. The next row contains GUIDE EPG, 0, and FAV MARKER buttons. At the bottom, there are four colored buttons: Netflix (red), App (green), YouTube (yellow), and Prime Video (blue). Below these are buttons for SEARCH, REPEAT, REPEAT A-B, and RANDOM. At the very bottom, there is a logo for Mandis shop and the website address www.mandis.tv.