



Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	↔		Pre Ch
	Back		Back
	Menu		Menu
	Netflix		Media
	Internet		Smart
	Ok		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -
	Mute		Mute
	i		Info
	Exit		Exit
	Source		AV
	Q.Menu		D. Menu
	EPG		Guide
	TXT		Text
	*		Format
	*/Q		3D





Original		Replacement		Original	Replacement
	[>]	 OPT	Options		
	Lang	 SOUND DUAL	Dual		
	Subt.	 AD SUBT	Subt		
	[+]	 SHIFT +  PICTURE FORMAT	Shift + Format		
	TV	 SEARCH TV/R	TV/R		
	Red	 A	Red		
	Green	 B	Green		
	Yellow	 C	Yellow		
	Blue	 D	Blue		
	Rec	 REC MODE	Rec		
	Play	 PLAY MODE	Play		
	Stop		Stop		
	Pause		Pause		
	<<		<<		
	>>		>>		

