



 



 







 



 







 







 




 

 
 



 







 


 






































Original		Replacement		Original		Replacement	
	TV/R		TV/Radio /		RECALL		Back / Return
	POWER		Power		0		0
	MUTE		Mute / Dimmer		FAV 2		Shift + Fav / Marker / PC
	SLEEP		Sleep / Timer		FAV 1		Fav / Marker / PC
	1		1		MENU		Menu / Home
	2		2		EXIT		Exit / Cancel / Clear
	3		3		Up / CH +		Up
	SUB		Subtitle / EQ		Left / VOL -		Left
	4		4		OK		OK
	5		5		Right / VOL +		Right
	6		6		Down / CH -		Down
	EPG 2		Shift + Guide / EPG / -/-		Red / Audio		Red / Netflix / Search
	EPG 1		Guide / EPG / -/-		Red / Audio		Audio / Lang I/II
	7		7		Blue / Info		Info / Angle
	8		8		Blue / Info		Blue / Prime Video / Random
	9		9		GREEN/PAUSE		Green / APP / Repeat
	TXT		Text / Goto		Yellow / Zoom		Zoom / Size





Original	Replacement	Original	Replacement
 Yellow / Zoom	 Yellow / YouTube / Repeat		
 VOL+	 Vol+		
 Page+	 CH+ / Page+		
 VOL-	 Vol-		
 Page-	 CH- / Page-		
 <<	 << / Tune-		
 >>	 >> / Tune+		
 PLAY	 Play / Slow		
 STOP	 Stop / Hold		
 I<<	 I<< / Preset-		
 >>I	 >>I / Preset+		
 PAUSE	 Pause / Step / Freeze		
 REC	 Rec / Rec Mode		

