




Original	Replacement	Original	Replacement
 Power	 Power	 Up	 Up
 1	 1	 Left	 Left
 2	 2	 OK	 OK
 3	 3	 Right	 Right
 4	 4	 Down	 Down
 5	 5	 Exit	 Exit / Cancel / Clear
 6	 6	 EPG	 Guide / EPG / -/--
 7	 7	 TV	 Display / Media
 8	 8	 TV	 AV / Input / RDS
 9	 9	 Radio	 TV/Radio /
 < Prev	 I<< / Preset-	 Red	 Red / Netflix / Search
 0	 0	 Green	 Green / APP / Repeat
 Next >	 >>I / Preset+	 Yellow	 Yellow / YouTube / Repeat
 Help	 D.Menu / Top	 Blue	 Blue / Prime Video / Random
 Timer	 Sleep / Timer	 Vol+	 Vol+
 Menu	 Menu / Home	 Mute	 Mute / Dimmer
Info	Info / Angle	CH+	CH+ / Page+





Original	Replacement
Vol-	Vol-
PVR	Smart / List
CH-	CH- / Page-
Audio	Audio / Lang I/II
Text	Text / Goto
Subtitle	Subtitle / EQ
<<	<< / Tune-
Play	Play / Slow
Stop	Stop / Hold
Pause	Pause / Step / Freeze
Rec	Rec / Rec Mode

Original	Replacement

