 

 



 

 



 

 























| Original   | Replacement   |
|--|---|
|  Standby  |  Power                         |
|  Auto     |  Smart / List                  |
|  Mute     |  Mute / Dimmer                 |
|  1        |  1                             |
|  2        |  2                             |
|  3        |  3                             |
|  4        |  4                             |
|  5        |  5                             |
|  6        |  6                             |
|  7        |  7                             |
|  8       |  8                            |
|  9      |  9                           |
|  -/--   |  Shift + Guide / EPG / -/-- |
|  0      |  0                           |
|  Recall |  Back / Return              |
|  Vol+   |  Vol+                       |
|  Aspect |  Shift + Picture / Format   |

| Original   | Replacement   |
|--|---|
|  Audio    |  Audio / Lang I/II       |
|  CH+      |  CH+ / Page+             |
|  Vol-     |  Vol-                    |
|  Display  |  Display / Media         |
|  CH-      |  CH- / Page-             |
|  Up       |  Up                      |
|  Left     |  Left                    |
|  OK       |  OK                      |
|  Right    |  Right                   |
|  Menu     |  Menu / Home             |
|  Down    |  Down                   |
|  Exit   |  Exit / Cancel / Clear |
|  Input  |  AV / Input / RDS      |
|  P.Mode |  Picture / Format      |
|  S.Mode |  Sound / Title         |
|  Sleep  |  Sleep / Timer         |
|  FAV    |  Fav / Marker / PC     |





| Original  | Replacement   |
|---|---|
|  FAV-      |  Shift + CH- /             |
|  FAV+      |  Shift + CH+ /             |
|  EPG       |  Guide / EPG / -/--        |
|  Text      |  Text / Goto               |
|  Hold      |  Shift + Stop /            |
|  Tv/Radio  |  TV/Radio /                |
|  Subtitle  |  Subtitle / EQ             |
|  Index     |  Info / Angle              |
|  Size      |  Zoom / Size               |
|  Reveal   |  Setup / OPT /            |
|  Subpage |  Eject / Surround        |
|  Media   |  Shift + Display / Media |
|  Play    |  Play / Slow             |
|  Pause   |  Pause / Step / Freeze   |
|  <<      |  << / Tune-              |
|  >>      |  >> / Tune+              |
|  Rec     |  Rec / Rec Mode          |

| Original   | Replacement   |
|--|---|
|  Stop   |  Stop / Hold                 |
|  I<<    |  I<< / Preset-               |
|  >>I    |  >>I / Preset+               |
|  Red    |  Red / Netflix / Search      |
|  Green  |  Green / APP / Repeat        |
|  Yellow |  Yellow / YouTube / Repeat   |
|  Blue   |  Blue / Prime Video / Random |

