 

 

 

 

 

 



 



 

 



 



 



 



 

 

 

 

 

 

 

 

 

 



 

 

 






















Original	Replacement	Original	Replacement
 Power	 Power	 Auto	 Info / Angle
 Source Search	 AV / Input / RDS	 5	 5
 Computer	 Fav / Marker / PC	 Aspect	 Picture / Format
 Video	 Shift + 4	 6	 6
 USB	 Shift + 8	 Color Mode	 Text / Goto
 LAN	 Blue / Prime Video / Random	 7	 7
 Screen Fit	 Zoom / Size	 Page+	 CH+ / Page+
 < Focus	 << / Tune-	 8	 8
 Focus >	 >> / Tune+	 E-Zoom+	 >>  / Preset+
 1	 1	 9	 9
 A/V Mute	 Mute / Dimmer	 Pointer	 Smart / List
 2	 2	 ?/Help	 TV/Radio /
 Freeze	 Pause / Step / Freeze	 Page-	 CH- / Page-
 3	 3	 0	 0
 User	 Display / Media	 E-Zoom-	 I<< / Preset-
 ID	 Guide / EPG / -/--	 Vol-	 Vol-
 4	 4	 Vol+	 Vol+





	Original	Replacement	Original	Replacement
	Menu	 Menu / Home		
	Up	 Up		
	Esc	 Exit / Cancel / Clear		
	Left	 Left		
	Enter	 OK		
	Right	 Right		
	Down	 Down		

