







 



 







 



 



 

 

 







 



 

 



 





 

 













 





 



 







Original	Replacement	Original	Replacement
 Standby	 Power	 Down / CH-	 Down
 DTV/VCR	 AV / Input / RDS	 Recall	 Fav / Marker / PC
 Mute	 Mute / Dimmer	 1	 1
 Info	 Info / Angle	 2	 2
 TV / Radio	 Pause / Step / Freeze	 3	 3
 Menu	 Menu / Home	 TTX	 Display / Media
 EPG	 Guide / EPG / -/--	 4	 4
 Exit	 Exit / Cancel / Clear	 5	 5
 Up / CH+	 Up	 6	 6
 Up / CH+	 CH+ / Page+	 OPT	 Back / Return
 Left / Vol-	 Left	 7	 7
 Left / Vol-	 Vol-	 8	 8
 OK	 OK	 9	 9
 Right / Vol+	 Right	 0	 0
 Right / Vol+	 Vol+	 Red	 TV/Radio /
 Fav	 Smart / List	 Green	 Audio / Lang I/II
 Down / CH-	 CH- / Page-	 Yellow	 Subtitle / EQ





	Original	Replacement		Original	Replacement
		 Text / Goto			
		 Red / Netflix / Search			
		 Green / APP / Repeat			
		 Yellow / YouTube / Repeat			
		 Blue / Prime Video / Random			
		 Rec / Rec Mode			
		 Stop / Hold			
		 << / Tune-			
		 >> / Tune+			

