
 
 
 
 

 
 






 
 


 




Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	↔		Pre Ch
	Back		Back
	Menu		Menu
	Netflix		Media
	Internet		Smart
	Ok		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -
	Mute		Mute
	i		Info
	Exit		Exit
	Source		AV
	Q.Menu		D. Menu
	EPG		Guide
	TXT		Text
	*		Format
	*/Q		3D





Original	Replacement	Original	Replacement
 [>]	 Options		
 Lang	 Dual		
 Subt.	 Subt		
 Shift + Format	 Shift + Format		
 TV	 TV/R		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 Rec	 Rec		
 Play	 Play		
 Stop	 Stop		
 Pause	 Pause		
 <<	 <<		
 >>	 >>		

