






















































 




 











Original	Replacement	Original	Replacement
PWR On/Off	 Power	Radio	 TV/Radio /
Mute	 Mute / Dimmer	Sys/Serv	 D.Menu / Top
H/V Play	 Play / Slow	Scan/Setup	 Setup / OPT /
Dec/Pause	 Pause / Step / Freeze	Text	 Text / Goto
	 Stop / Hold	P.lock	 AV / Input / RDS
East	 Rec / Rec Mode	Menu	 Menu / Home
Lang./Rewind	 << / Tune-	Menu Up	 Up
LNB F.Forward	 >> / Tune+	Info	 Info / Angle
Interat	 I<< / Preset-	Menu Left	 Left
+	 >>I / Preset+	OK Enter	 OK
De-emph	 Sound / Title	Menu Right	 Right
50j17	 Audio / Lang I/II	Exit	 Exit / Cancel / Clear
Subt.List	 Subtitle / EQ	Menu Down	 Down
Navi Mode	 Eject / Surround	Swap	 Back / Return
Alt/16:9	 Picture / Format	Volume+	 Vol+
Wn	 Zoom / Size	TV	 Smart / List
Sleep Timer	 Sleep / Timer	CH/Page+	 CH+ / Page+



Original	Replacement	Replacement
Volume-		Vol-
Display		Display / Media
CH/Page-		CH- / Page-
1. ?		1
2abc		2
3def		3
4ghi		4
5jkl		5
6mno		6
7pqrm		7
8tuv		8
9wxyz		9
Guide Pilote		Guide / EPG / -/--
0/10		0
FAV Pref.		Fav / Marker / PC
Red		Red / Netflix / Search
Green		Green / APP / Repeat

Original	Replacement	Replacement
Yellow		Yellow / YouTube / Repeat
Blue		Blue / Prime Video / Random
On/Off		Shift + Power
Freeze		Shift + Pause / Step /
		Shift + Stop /
Tune-		Shift + << /
Tune+		Shift + >> /
Aft/Caf		Shift + D.Menu / Top Menu
Auth./DISEQC		Shift + Menu /
Help		Shift + Info / Angle
View		Shift + OK
Clear		Shift + Exit / Cancel / Clear
Copy/Delete		Shift + Smart / List
CHH+		Shift + CH+ /
Erase		Shift + Display / Media
CHH-		Shift + CH- /
Video		Shift + 4



Original	Replacement	Original	Replacement
App	 + 		

Shift +  
Green /  
APP /  
REPEAT

