
















| Original   | Replacement  |
|--|--|
|  Power      |  Power              |
|  Open/Close |  Eject / Surround   |
|  1          |  1                  |
|  2          |  2                  |
|  3          |  3                  |
|  4          |  4                  |
|  5          |  5                  |
|  6          |  6                  |
|  7          |  7                  |
|  8          |  8                  |
|  9         |  9                 |
|  Vol+ TV  |  Vol+             |
|  TV/VCR   |  Smart / List     |
|  0        |  0                |
|  AV       |  AV / Input / RDS |
|  Vol- TV  |  Vol-             |
|  Backward |  << / Tune-       |





 







 

 

 

 

 

| Original  | Replacement   |
|---|---|
|  Forward           |  >> / Tune+            |
|  Skip I<<          |  I<< / Preset-         |
|  Skip >>I          |  >>I / Preset+         |
|  Pause/Step        |  Pause / Step / Freeze |
|  Play              |  Play / Slow           |
|  Stop              |  Stop / Hold           |
|  Display / CLK/CNT |  Display / Media       |
|  Up/+ PR/TRK       |  CH+ / Page+           |
|  Up/+ PR/TRK       |  Up                    |
|  i/Setup           |  Setup / OPT /         |
|  Left             |  Left                 |
|  OK/Enter        |  OK                  |
|  Right           |  Right               |
|  Disc Menu       |  D.Menu / Top        |
|  Down/- PR/TRK   |  CH- / Page-         |
|  Down/- PR/TRK   |  Down                |
|  Return          |  Back / Return       |







| Original   | Replacement   |
|--|---|
|  Power VCR        |  Power                   |
|  Eject VCR        |  Eject / Surround        |
|  1 VCR            |  1                       |
|  2 VCR            |  2                       |
|  3 VCR            |  3                       |
|  4 VCR            |  4                       |
|  5 VCR            |  5                       |
|  6 VCR            |  6                       |
|  7 VCR            |  7                       |
|  8 VCR            |  8                       |
|  9 VCR            |  9                       |
|  Vol+ TV        |  Vol+                  |
|  0 VCR          |  0                     |
|  Vol- TV        |  Vol-                  |
|  << Backward    |  << / Tune-            |
|  >> Forward     |  >> / Tune+            |
|  Pause/Step VCR |  Pause / Step / Freeze |

| Original   | Replacement   |
|--|---|
|  Play VCR       |  Play / Slow                 |
|  Stop VCR       |  Stop / Hold                 |
|  Display VCR    |  Display / Media             |
|  i/Setup VCR    |  Setup / OPT /               |
|  O)/Audio VCR   |  Audio / Lang I/II           |
|  Rec/ITR        |  Rec / Rec Mode              |
|  Search VCR     |  Red / Netflix / Search      |
|  Clear VCR      |  Exit / Cancel / Clear       |
|  Repeat VCR     |  Green / APP / Repeat        |
|  A-B/LP VCR     |  Yellow / YouTube / Repeat   |
|  Random/CM Skip |  Blue / Prime Video / Random |



