 





























Original		Replacement		Original		Replacement	
	Power		Power		Play		Play / Slow
	Open/Close		Eject / Surround		Pause/Step		Pause / Step / Freeze
	1		1		Stop		Stop / Hold
	2		2		DVD Menu		D.Menu / Top
	3		3		Title		Sound / Title
	4		4		Up		Up
	5		5		Enter		OK
	6		6		Down		Down
	7		7		Right		Right
	8		8		Left		Left
	9		9		Return		Back / Return
	0		0		Display		Display / Media
	Clear		Exit / Cancel / Clear		Audio		Audio / Lang I/II
	<<		<< / Tune-		Subtitle		Subtitle / EQ
	>>		>> / Tune+		Angle		Info / Angle
	I<<		I<< / Preset-		Setup		Setup / OPT /
	>>I		>>I / Preset+		Marker		Fav / Marker / PC





Original	Replacement	Original	Replacement
 Search	 Red / Netflix / Search		
 Program	 Shift + TV/Radio / Program		
 Zoom	 Zoom / Size		
 Repeat	 Green / APP / Repeat		
 A-B	 Yellow / YouTube / Repeat		
 Resolution	 TV/Radio /		
 Karaoke ECHO	 Blue / Prime Video / Random		
 Power Tv	 Shift + Power		
 AV Tv	 AV / Input / RDS		
 PR/CH+ Tv	 CH+ / Page+		
 PR/CH- Tv	 CH- / Page-		
 Vol+ Tv	 Vol+		
 Vol- Tv	 Vol-		

Original	Replacement	Original	Replacement

