



Original	Replacement
 Power	 Power
 [i]/Info	 Info
 Mute	 Mute
 I-II	 Dual
 OK/Select	 Ok
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/-/+10	 +  Shift + Guide
 Exit	 Exit

Original	Replacement
 Menu	 Menu
 Red/↑/Return	 Red
 Green/↓/Subtitle	 Green
 Yellow/Audio	 Yellow
 Blue/Angle	 Blue
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 P+	 Ch +
 P-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 <<	 <<





 


 





 



 


 



 


 
 



 



 



 

 

 



 



 



 

 

 

 



 




Original		Replacement		Original		Replacement	
	>>		>>				
	[TV]		TV/R				
	D-Menu		Smart				
	TV		Media				
	AV		AV				
	P<P		Pre Ch				
	PP		D. Menu				
	[≡]		Text				
	[≡o]		Subt				
	[≡+]		Format				
	[≡x]		3D				
	[≡♦]/Wide	+	Shift + Format				
	[≡?]		Options				
	[≡i]/Guide		Guide				
	[::]/Subtitle		Back				




 

 
 












 




Original		Replacement		Original		Replacement	
	Power		Power		Stop		Stop
	1		1		Play		Play
	2		2		Pause		Pause
	3		3		D-Menu		Smart
	4		4		<<		<<
	5		5		>>		>>
	6		6		l<<		l<<
	7		7		>>l		>>l
	8		8		Time		Shift + AV
	9		9		Zoom		Shift + Eject
	0		0		Program		Sleep
	-/--/+10		Guide		Search Mode		AV
	Exit		Exit		Repeat		Text
	Red/↑/Return		Red		A-B		Shift + Play
	Green/↓/Subtitle		Green		C		Yellow
	Yellow/Audio		Shift + Yellow		Title		Info
	Blue/Angle		Blue		Display		Shift + Info





Original		Replacement		Original	Replacement
	Open/Close		Eject		
	Menu		Menu		
	Select		Ok		
	Up		Up		
	Down		Down		
	Left		Left		
	Right		Right		
	Vol+		Vol +		
	Vol-		Vol -		
	Mute		Mute		

