



Original	Replacement
PP	Back / Return
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
P<P	Fav / Marker / PC
0	0
--	Guide / EPG / -/--
M	Menu / Home
i	Info / Angle
I-II	Audio / Lang I/II

Original	Replacement
Mute	Mute / Dimmer
Left	Left
Up	Up
Right	Right
OK	OK
Down	Down
V -	Vol-
V +	Vol+
P -	CH- / Page-
P +	CH+ / Page+
Red / Sound	Red / Netflix / Search
Red / Sound	Sound / Title
Green / Picture	Green / APP / Repeat
Green / Picture	Picture / Format
Yellow / Feature	Yellow / YouTube / Repeat
Blue / Install	Blue / Prime Video / Random
Text	Text / Goto





	Original	Replacement		Original	Replacement
	[≡o]	 SLEEP	Sleep / Timer		
	Hold	 HOLD	Stop / Hold		
	[≡X]	 CLEAR EXIT CANCEL	Exit / Cancel / Clear		
	Mix / PIP Swap	 LIST SMART	Smart / List		
	PIP / Size	 SIZE ZOOM	Zoom / Size		
	PIP Down / [≡?]	 PRESET-	I<< / Preset-		
	PIP Up / Index	 PRESET+	>>I / Preset+		
	[TV]	 PROGRAM TV/ RADIO	TV/ Radio /		
	[AV]	 RDS AV INPUT	AV / Input / RDS		

