



 

 






 









 

 







Original	Replacement
 System Off	 Power
 TV	 Shift + 1
 Disc	 Shift + 2
 Radio	 Shift + 3
 AUX	 Shift + 4
 Video	 Shift + 5
 D-IN	 Shift + 6
 USB1	 Shift + 7
 USB 2	 Shift + 8
 PC	 Shift + 9
 Presets + / Pic +	 Ch +
 Presets - / Pic -	 Ch -
 Info	 Info
 Mute	 Mute
 Subtitle	 Subt
 Audio	 Dual
 Volume +	 Vol +

Original	Replacement
 Volume -	 Vol -
 Set-Up Menu	 Menu
 Disc Menu / Teletext	 D. Menu
 Disc Menu / Teletext	 Text
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Status / Mix	 Smart
 OSD	 Media
 Red / Playlist	 Red
 Green / Random	 Green
 Yellow / Repeat	 Yellow
 Blue / Angle	 Blue
 Yellow / Repeat	 Shift + Text
 Red / Playlist	 List





Original		Replacement		Original		Replacement	
	1		1		<< Search/Slow		<<
	2		2		>> Search/Slow		>>
	3		3		Play		Play
	4		4		Title		Shift + Info
	5		5		Stop		Stop
	6		6		Pause / Freeze		Pause
	7		7				
	8		8				
	9		9				
	0		0				
	Clear		Exit				
	Zoom		Shift + Eject				
	A-B		Shift + Play				
	Screen Format		Format				
	Open		Eject				
	I<< Previous/Step		I<<				
	>>I Next/Step		>>I				

