 

 









 





 




 
 







 







 





 



 











 





 















 











Original	Replacement	Original	Replacement
 Input	 AV / Input / RDS	 Blue	 Blue / Prime Video / Random
 Power	 Power	 [=]	 D.Menu / Top
 1	 1	 Up	 Up
 2	 2	 Play	 Play / Slow
 3	 3	 Pause	 Pause / Step / Freeze
 4	 4	 Left	 Left
 5	 5	 OK	 OK
 6	 6	 Right	 Right
 7	 7	 Back	 Back / Return
 8	 8	 Down	 Down
 9	 9	 Exit	 Exit / Cancel / Clear
 Guide	 Guide / EPG / -/--	 Vol+	 Vol+
 0	 0	 Home	 Menu / Home
 CH.List	 Smart / List	 CH+ / Page+	 CH+ / Page+
 Red	 Red / Netflix / Search	 Vol-	 Vol-
 Green	 Green / APP / Repeat	 CH- / Page-	 CH- / Page-
 Yellow	 Yellow / YouTube / Repeat	 Voice	 Display / Media





	Original	Replacement	
	Subtitle	 EQ Subtitle / EQ	
	Mute	 DIMMER MUTE Mute / Dimmer	
	Text	 GOTO TEXT Text / Goto	
	[ ' ]	 PROGRAM TV/RADIO TV/Radio /	
	Salto	 OPT-TOOLS SETUP Setup / OPT /	
	deezer	 SIZE ZOOM Zoom / Size	
	Netflix	 SHIFT + NETFLIX Shift + Red / Netflix /	
	prime video	 SHIFT + Prime Video Shift + Blue / Prime	
	YouTube	 SHIFT + YouTube Shift + Yellow / YouTube /	
	Rakuten Tv	 SHIFT + APP Shift + Green / APP /	
	molotov.tv	 FORMAT PICTURE Picture / Format	
	Canal+	 PC FAV MARKER Fav / Marker / PC	

Original	Replacement

