



Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+
	Lang		Audio / Lang / I/II
	Source (Games)		Eject / Surround
	Movie-Music-Phot		Picture / Format
	[≡]..		Zoom / Size
	* / O		Sleep / Timer
	TV		TV/Radio /
	Q.Menu		D.Menu / Top
	[-O-]		Setup / OPT /
	[≡]/Text		Text / Goto
	Menu		Menu / Home
	Up		Up
	i		Info / Angle
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Back		Back / Return
	Vol+		Vol+
	World (Violet)		Smart / List
	PR+		CH+ / Page+
	Vol-		Vol-
	* / Q		Display / Media
	PR-		CH- / Page-
	1		1
	2		2





	Original	Replacement		Original	Replacement
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	Guide		Guide / EPG / -/--		
	0		0		
	Red		Red / Netflix / Search		
	Green		Green / APP / Repeat		
	Yellow		Yellow / YouTube / Repeat		
	Blue		Blue / Prime Video / Random		
	Recall		Shift + Back / Return		

	Original	Replacement		Original	Replacement

