




































 









 







 


Original		Replacement		Original		Replacement	
	Power		Power				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Vol+		Vol+				
	CH+		CH+ / Page+				
	Vol-		Vol-				
	Mute		Mute / Dimmer				
	CH-		CH- / Page-				
	Source		AV / Input / RDS				



















 






















 
















 














Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Menu		Menu / Home
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze

Original	Replacement	Original	Replacement
	Red		Red / Netflix / Search
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	i		Info / Angle
	CH+		CH+ / Page+
	CH-		CH- / Page-





Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Menu		Menu / Home
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Media		Display / Media
	Up		Up
	Guide		Guide / EPG / -/-
	Left		Left
	OK/List		OK
	OK/List	 + 	Shift + Smart / List
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Last		Back / Return
	Vol+		Vol+
	Info		Info / Angle































 

 

 

 










 
 





 



Original	Replacement
CH+	CH+ / Page+
Vol-	Vol-
Mute	Mute / Dimmer
CH-	CH- / Page-
I>	Shift + Play /
I<<	I<< / Preset-
>>I	>>I / Preset+
?	D.Menu / Top
Audio	Audio / Lang I/II
[...]	Subtitle / EQ
[=+]	Sound / Title
[= = =]	Smart / List
OPT+	Setup / OPT /
Edit	Fav / Marker / PC
Teletext	Text / Goto
Tv/Radio	TV/Radio /
Sleep	Sleep / Timer

Original	Replacement
Source	AV / Input / RDS
Wide	Zoom / Size
V-Format	Picture / Format





Original		Replacement		Original		Replacement	
	Power		Power		OK/List		Smart / List
	1		1		Right		Right
	2		2		Exit		Exit / Cancel / Clear
	3		3		Down		Down
	4		4		Vol+		Vol+
	5		5		Info		Info / Angle
	7		7		CH+		CH+ / Page+
	8		8		Vol-		Vol-
	9		9		Mute		Mute / Dimmer
	0		0		CH-		CH- / Page-
	Menu		Menu / Home				
	<<		<< / Tune-				
	>>		>> / Tune+				
	Up		Up				
	Guide		Guide / EPG / -/--				
	Left		Left				
	OK/List		OK				

