

 



 

 

 

 

 






 
 





 







 







 


 




















| Original | | Replacement | | Original | | Replacement | |
|---|----------|---|-------------------|---|-------|---|-------------------|
|  | Power |  | Power |  | 7 |  | 7 |
|  | Mute |  | Mute / Dimmer |  | 8 |  | 8 |
|  | Audio |  | Audio / Lang I/II |  | 9 |  | 9 |
|  | TV / STB |  | AV / Input / RDS |  | 0 |  | 0 |
|  | TV / R |  | TV/Radio / |  | SAT |  | Shift + 0 |
|  | Sleep |  | Sleep / Timer |  | EPG |  | Guide / EPG / -/- |
|  | SUB |  | Subtitle / EQ |  | Fav |  | Fav / Marker / PC |
|  | TXT |  | Text / Goto |  | PGUP |  | CH+ / Page+ |
|  | Multi |  | Display / Media |  | PGDN |  | CH- / Page- |
|  | P / N |  | Picture / Format |  | Up |  | Up |
|  | Recall |  | Back / Return |  | Right |  | Right |
|  | 1 |  | 1 |  | FAV + |  | Vol+ |
|  | 2 |  | 2 |  | FAV - |  | Vol- |
|  | 3 |  | 3 |  | Down |  | Down |
|  | 4 |  | 4 |  | Left |  | Left |
|  | 5 |  | 5 |  | OK |  | OK |
| | 6 | | 6 | | Menu | | Menu / Home |





| Original | Replacement |
|---|-----------------------------|
|  | Exit / Cancel / Clear |
|  | Red / Netflix / Search |
|  | Green / APP / Repeat |
|  | Yellow / YouTube / Repeat |
|  | Blue / Prime Video / Random |
|  | Pause / Step / Freeze |
|  | Zoom / Size |
|  | D.Menu / Top |
|  | Info / Angle |
|  | Shift + 8 |
|  | Shift + Yellow / YouTube / |
|  | Shift + Text / |
|  | Shift + 1 |
|  | Shift + 2 |
|  | Eject / Surround |
|  | Stop / Hold |
|  | Rec / Rec Mode |

| Original | Replacement |
|---|---------------------|
|  | Sound / Title |
|  | << / Tune- |
|  | >> / Tune+ |
|  | Smart / List |
|  | Play / Slow |
|  | I<< / Preset- |
|  | >I< / Setup / OPT / |
|  | >>I / Preset+ |

