



Original	Replacement
Power Tv	Shift + Power
Power	Power
Review	Setup / OPT /
Tv/VCR	TV/Radio /
Tv/VCR Tv	Shift + TV/Radio / Program
Audio	Audio / Lang I/II
Mute Tv	Shift + Mute / Dimmer
--:--	Smart / List
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9

Original	Replacement
X	Exit / Cancel / Clear
0	0
Timer	Sleep / Timer
Start Debut +	Green / APP / Repeat
Start Debut -	Red / Netflix / Search
Stop Fin +	Blue / Prime Video / Random
Stop Fin -	Yellow / YouTube / Repeat
Date+	Vol+
PR+	CH+ / Page+
Date-	Vol-
PR-	CH- / Page-
Prog	D.Menu / Top
Timer/?	Shift + Sleep / Timer
I/II	Display / Media
30 Sec/>>>	Back / Return
<<<	<<< / Tune-
Play	Play / Slow





Original	Replacement	Original	Replacement
>>	>> / Tune+		
Rec	Rec / Rec Mode		
Stop	Stop / Hold		
Pause	Pause / Step / Freeze		
Menu	Menu / Home		
OK	OK		
Up	Up		
Tv PR+	+  Shift + CH+ /		
Left/ <</-	Left		
Tv Vol-	+  Shift + Vol-		
Left/ <</-	<< / Preset-		
Right/>> /+	>>  / Preset+		
Tv Vol+	+  Shift + Vol+		
Right/>> /+	Right		
Down	Down		
Tv PR-	+  Shift + CH- /		

