



Original	Replacement
TEST	Text / Goto
1	1
1 FM/AM	Shift + 1
2	2
2 FM/AM	Shift + 2
3	3
3 FM/AM	Shift + 3
Effect	Picture / Format
4	4
4 FM/AM	Shift + 4
5	5
5 FM/AM	Shift + 5
6	6
6 FM/AM	Shift + 6
7/P	Shift + 7
7 FM/AM	7
8	8

Original	Replacement
8 FM/AM	Shift + 8
9	9
9 FM/AM	Shift + 9
Level- SURR L	Down
Level - SURR R	Shift + Down
Level- Center	Shift + CH- /
Level- SUBWFR	Left
Level- Front L	Vol-
Level- Front R	CH- / Page-
Level+ SURR L	Up
Level+ SURR R	Shift + Up
Level+ Center	Shift + CH+ /
Level+ SUBWFR	Right
Level+ Front L	Vol+
Level+ Front R	CH+ / Page+
10/Return	Shift + Guide / EPG / -/-
10 FM/AM	Guide / EPG / -/-





Original	Replacement
 0	 0
 +10 +10/+100	 Fav / Marker / PC
 +10 +10 FM/AM	 Shift + 0
 Play/TA/News/Info	 Shift + Play /
 Play FM/AM	 Play / Slow
 I<</PTY-	 Shift + I<< / Preset-
 I<<FM/AM	 I<< / Preset-
 Pause/PTY Search	 Shift + Pause / Step /
 Pause FM/AM	 Pause / Step / Freeze
 >>I/PTY+	 Shift + >>I / Preset+
 >>I FM/AM	 >>I / Preset+
 Stop/Display	 Shift + Stop /
 Stop FM/AM	 Stop / Hold
 FM/AM	 Shift + TV/Radio / Program
 FM Mode	 TV/Radio /

Original	Replacement

 




Original	Replacement	Original	Replacement
	+		
	+		
	+		
	+		
	+		

Hold



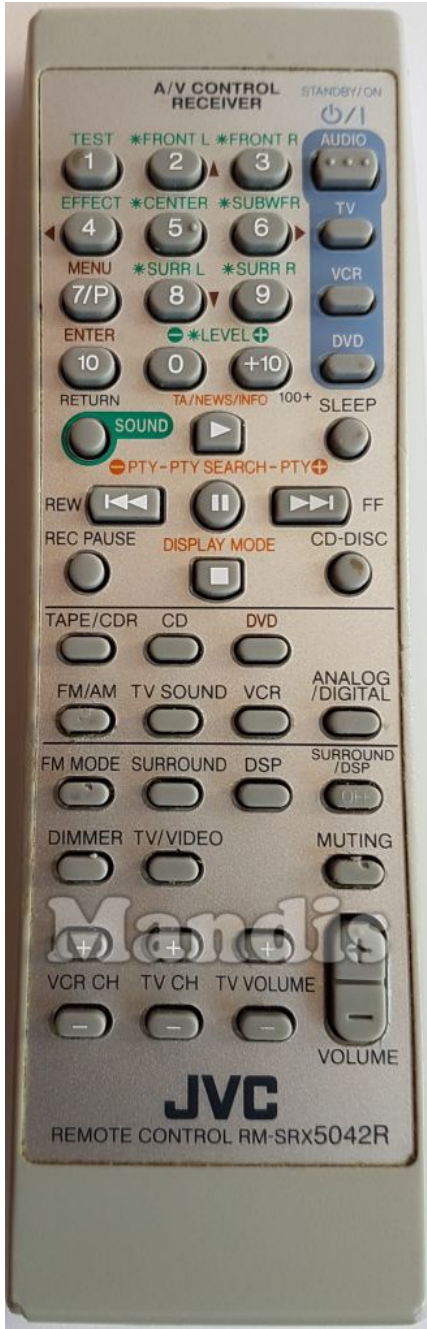

Original	Replacement	Original	Replacement
Audio Standby	Audio / Lang I/II	FM/AM	Shift + TV/Radio / Program
1	1	VCR	Shift + 4
2	2	Analog/Digital	Smart / List
3	3	FM/Mode	AV / Input / RDS
TV Standby	Power	Surround	Eject / Surround
4	4	DSP	Text / Goto
5	5	Surround DSP	Sound / Title
6	6	Dimmer	Shift + Mute / Dimmer
VCR Standby	Shift + Power	Tv/Video	TV/Radio /
7/P	7	Muting	Mute / Dimmer
DVD Standby	Shift + 2	VCR CH+	Shift + CH+ /
Play/TA/News/Info	Play / Slow	Tv CH+	CH+ / Page+
Sleep	Sleep / Timer	Tv Vol+	Shift + Vol+
I<</PTY-	I<< / Preset-	Vol+	Vol+
Pause/PTY Search	Pause / Step / Freeze	VCR CH-	Shift + CH- /
>>I/PTY+	>>I / Preset+	Tv CH-	CH- / Page-
Stop/Display	Stop / Hold	Tv Vol-	Shift + Vol-



Mode



Original

Replacement



 















 

 



 








	Vol-		Vol-





Original

Replacement





Original	Replacement	Original	Replacement
 1 TV Sound	 1	 2 TV Sound	 2
 3 TV Sound	 3	 4 TV Sound	 4
 5 TV Sound	 5	 6 TV Sound	 6
 7 TV Sound	 7	 8 TV Sound	 8
 9 TV Sound	 9	 10 TV Sound	 Guide / EPG / -/--
 0 TV Sound	 0	 +10 TV Sound	 Fav / Marker / PC
 Play	 Play / Slow	 I<<	 I<< / Preset-
 Pause	 Pause / Step / Freeze	 >>I	 >>I / Preset+
 Rec Pause	 Rec / Rec Mode		

Original	Replacement	Original	Replacement
 Stop	 Stop / Hold	 TV Sound	 Sound / Title

