



 





 
 


 
 
 






 
 

 

 
 


 
 

 



 
 










 







 






Original	Replacement	Original	Replacement
 Power	 Power	 P+	 Ch +
 Open/Close	 Eject	 P-	 Ch -
 1	 1	 Audio	 Dual
 2	 2	 Sleep/Timer	 Sleep
 3	 3	 Vol+	 Vol +
 4	 4	 Vol-	 Vol -
 5	 5	 Mute	 Mute
 6	 6	 Menu	 Menu
 7	 7	 AV	 AV
 8	 8	 i	 Info
 9	 9	 Up	 Up
 0	 0	 Down	 Down
 -/--	 Shift + Guide	 Right	 Right
 Recall	 Back	 Left	 Left
 P.Mode	 Shift + Format	 Enter	 Ok
 S.Mode	 Shift + Dual	 DTV/Radio/Zoo	 TV/R
 Aspect	 Format	 List/Media	 Media





Original		Replacement		Original		Replacement	
	Subtitle		Subt		[?]/Goto		Options
	FAV		Pre Ch		Nothing1		Exit
	Play		Play		Nothing2		Smart
	Pause		Pause				
	Stop/Still		Stop				
	Guide/Repeat		Guide				
	Red/Title		Red				
	Green/A-B		Green				
	Yellow/Setup		Yellow				
	Blue/DVD Menu		Blue				
	Text		Text				
	<<		<<				
	[:]/>>		>>				
	I<</Mix		I<<				
	>>I/[O]		>>I				
	[=i]/Language		List				
	[+]/Angle		3D				

