



Original	Replacement
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 i	 Info / Angle
 0	 0
 AV	 AV / Input / RDS
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat

Original	Replacement
 Blue	 Blue / Prime Video / Random
 TV/DTV	 TV/Radio /
 P +	 CH+ / Page+
 Menu	 Menu / Home
 Up	 Up
 Vol -	 Vol-
 Left	 Left
 OK	 OK
 Right	 Right
 Vol +	 Vol+
 Down	 Down
 Text / Top Menu	 Text / Goto
 Text / Top Menu	 D.Menu / Top
 P -	 CH- / Page-
 Back	 Back / Return
 Up / Hold	 Smart / List
 Up / Hold	 Shift + Stop / Hold





Original	Replacement	Original	Replacement
Up / Hold	>>I / Preset+		
<< / F.T/L	<< / Tune-		
Play / ?	Play / Slow		
>> / Guide / Size	>> / Tune+		
>> / Guide / Size	Guide / EPG / -/--		
Down / Timer	I<< / Preset-		
Down / Timer	Display / Media		
Rec / ◇	Rec / Rec Mode		
Stop / Cancel	Stop / Hold		
Stop / Cancel	Exit / Cancel / Clear		
Pause / Subtitle / [≡i]	Pause / Step / Freeze		
Pause / Subtitle / [≡i]	Subtitle / EQ		
Zoom	Zoom / Size		
Audio / Guide	Audio / Lang I/II		
I / II	Shift + Audio / Lang I/II		
I / II	Sound / Title		
Sleep	Sleep / Timer		

